



# Rubbish Chutes

[www.actavo.com](http://www.actavo.com)

**Actavo** 

# RUBBISH CHUTE USER GUIDE

The rubbish chute can be securely fastened to scaffolding using relevant components.

Before installation always check that the scaffolding or roof structure is capable of supporting the rubbish chute assembly.

Ensure that the area at the base of the rubbish chute system is fenced off. The fence should only be moved to allow positioning and removal of the rubbish skip.

## 20-inch diameter red Rota-chute system

The rubbish chute and side entry section are fitted with a bracket and chain assembly, the top hopper section is not.

The Rubbish Chute is designed so that each chute and side entry section is connected to the one below using the bracket and chain. This will ensure that the 2 chains at the base will remain free.

**From scaffolding**, the universal fixing frame is attached using 2 lengths of scaffold tube and 4 scaffold couplings. The first rubbish chute bracket is connected to the chain from the universal fixing frame. The top hopper sits inside the top chute without the need for fixing.

**From a parapet or window**, the first rubbish chute bracket is connected to the chain from the window. Always ensure the spreader bar is fitted to ensure an even distribution of weight, and the parapet is capable of taking the strain you will put on it.

## 22-inch yellow and 30-inch black Multi-chute system

The rubbish chute and side entry section are fitted with a wire rope and carabine hook assembly, the top hopper section is not.

The Rubbish Chute is designed so that each chute and side entry section is connected to the one above using the wire rope and carabine hook. This will ensure that the 2 wire ropes on the top section will remain free.

**From scaffolding**, the 2 free wire ropes wrap around the scaffold tube and connect back to the U-bolt attached to the rubbish chute, thus taking away the need for a universal fixing frame. The top hopper sits inside the top chute without the need for fixing.

**From a parapet or window**, the 2 free wire ropes wrap around the outside frame. Always ensure the spreader bar is fitted to ensure an even distribution of weight, and the parapet is capable of taking the strain you will put on it.

## For All Systems

Deflection ropes should be passed down the chute system and connected to the skip, this will ensure an even curve and minimise wear.

Steel liners can be used where extreme wear is expected.

The chute should be tied back to the main building or structure every five metres or every fifth section.

All scaffolding should be erected according to the latest regulations and be capable of supporting the chute assembly. Fencing should seal off the area around the chute exit in order to protect the public and workmen.

## Clearance of a Blockage

Clearance of an exit blockage should begin by securing the chute to the scaffold to prevent it swinging when any of the blocked sections are disconnected. With the assistance of a helper, the lower chute sections can be released from the chains and drawn clear by remote means, such as a rope, to allow the accumulation to enter the skip. If the blockage extends well up the chute, consideration should be given to hauling the skip clear to allow the debris to spill on to the ground. (A competent person should only do this operation under direct supervision.)

Clearance of a bridging or lodgment blockage requires the identification of the chute section immediately above the blockage. Suitable turn buckles should be attached to the extra lashings. These can be adjusted to relieve the tension in the chains or wires supporting the chute sections above the blockage. With the tension removed, it should then be possible to remove chute sections to gain access to the blockage from above.

## Dismantling of Chutes

Generally, when a chute is no longer required, it should be dismantled by a reverse of the erection procedure.

No attempt should be made to lower the chute assembly until:

- all blockages are cleared
- all tie points are free
- the skip is removed

Chute sections shall be removed, progressively, one section at a time.

## SCOTLAND & NORTH REGION

### Dundee

6 George Buckman Drive,  
Dundee, DD2 3SP  
Tel: 01382 227 552  
dundee.hire@actavo.com

### Edinburgh

Unit 2, West Harbour Road,  
Granton, Edinburgh, EH5 1PP  
Tel: 0131 552 7534  
edinburgh.hire@actavo.com

### Gateshead

Nest Road, Felling Industrial Estate,  
Gateshead, Tyne & Wear, NE10 0LU  
Tel: 0191 469 8125  
gateshead.hire@actavo.com

### Glasgow

2300 London Road,  
Glasgow, G32 8YU  
Tel: 0141 810 8350  
glasgow.hire@actavo.com

### Manchester

Elm Grove, Sale, Cheshire,  
M33 7JY  
Tel: 0161 969 3925  
manchester.hire@actavo.com

### Teesside

Brenda Road, Hartlepool, TS25 2BT  
Tel: 01429 261 444  
teesside.hire@actavo.com

## CENTRAL REGION

### Brigg

Island Carr Industrial Estate, Island  
Carr Road, Brigg,  
North Lincolnshire, DN20 8PD  
Tel: 01652 601 390  
brigg.hire@actavo.com

### King's Lynn

23 Maple Road,  
Saddlebow Industrial Estate, King's  
Lynn, Norfolk, PE34 3AH Tel: 01553  
771 465  
kingslynn.hire@actavo.com

### Leeds

Unit 7, Hawthorne Court,  
Howley Park Road, Morley,  
Leeds, LS27 0BN  
Tel: 0113 387 0630  
leeds.hire@actavo.com

### Norwich

Arminghall Close, Woodcock Road,  
Norwich, NR3 3UE  
Tel: 01603 309 010  
norwich.hire@actavo.com

### Nottingham

Manor House Road, Long Eaton  
Nottingham, NG10 1LR  
Tel: 0115 946 7660  
nottingham.hire@actavo.com

### Peterborough

Unit 5, Fengate Trade Park,  
Second Drove, Peterborough,  
Cambridgeshire, PE1 5XA  
Tel: 01733 890 009  
peterborough.hire@actavo.com

### South Yorkshire

Unit 14, Meadow Bank Works,  
Meadow Bank Road, Rotherham,  
South Yorkshire, S61 2NF  
Tel: 01709 554 149  
southyorkshire.hire@actavo.com

## SOUTH EAST REGION

### Chelmsford

Unit 14, Temple Wood Industrial  
Estate, Stock Road, Chelmsford,  
CM2 8LA  
Tel: 01277 841 670  
chelmsford.hire@actavo.com

### East London - Bow

Unit 3, Primrose Works,  
10 Stour Road, Bow, London,  
E3 2NT  
Tel: 020 8533 7333  
bow.hire@actavo.com

### South London - Thornton Heath

Station Yard, 56 Brigstock Road,  
Thornton Heath, Surrey, CR7 8RX  
Tel: 020 8689 6044  
croydon.hire@actavo.com

### Luton

227-231 Selbourne Road,  
Luton, Bedfordshire, LU4 8NR  
Tel: 01582 491 000  
luton.hire@actavo.com

### Maidstone

Unit 4, St Michaels Close,  
Aylesford, ME20 7XE  
Tel: 01622 794 450  
kent.hire@actavo.com

### West London - Uxbridge

Wallingford Road, Uxbridge,  
Middlesex, UB8 2XS  
Tel: 01895 527 666  
uxbridge.hire@actavo.com

## SOUTH WEST REGION

### Birmingham

319 Shady Lane, Great Barr  
Birmingham, B44 9EA  
Tel: 0121 366 7840  
birmingham.hire@actavo.com

### Bournemouth

Unit 158, Eastern Business Park,  
Bournemouth International Airport,  
Christchurch, Dorset, BH23 6NE  
Tel: 01202 591 255  
bournemouth.hire@actavo.com

### Bristol

Silverthorne Lane, St. Philips,  
Bristol, Avon, BS2 0QD  
Tel: 0117 972 3353  
bristol.hire@actavo.com

### Cardiff

Longships Road, Cardiff Docks  
CF10 4RP  
Tel: 029 2079 1188  
cardiff.hire@actavo.com

### Chichester

Units A & B, Tokar Industrial Estate,  
Yapton Lane, Walberton,  
West Sussex, BN18 0AS  
Tel: 01243 558 290  
chichester.hire@actavo.com

### Exeter

Cofton Road, Marsh Barton,  
Exeter, Devon, EX2 8QW  
Tel: 01392 273 595  
exeter.hire@actavo.com

### Truro

Perranwell Station,  
Perranwell, Near Truro,  
Cornwall, TR3 7LG  
Tel: 01872 870 078  
truro.hire@actavo.com

## SHORING

### Birmingham

319 Shady Lane, Great Barr  
Birmingham, B44 9EA  
Tel: 0121 366 7840  
birmingham.shoring@actavo.com

### Northampton

21-22 Enterprise Road, Raunds  
Northampton, NN9 6JE  
Tel: 01933 462 190  
raunds.shoring@actavo.com

### West London - Uxbridge

Wallingford Road, Uxbridge,  
Middlesex, UB8 2XS  
Tel: 01895 527 675  
uxbridge.shoring@actavo.com

## IRELAND

### Cork

Silver Bullet Industrial Estate,  
Glanmire, Co. Cork, Ireland  
Tel: +353 21 486 6400  
cork.hire@actavo.com

### Dublin

Killeen Road, Dublin,  
Co. Dublin, Ireland  
Tel: +353 1 601 1500  
dublin.hire@actavo.com

### Galway

Airglooney Industrial Estate,  
Tuam, Co. Galway, Ireland  
Tel: +353 93 60470  
galway.hire@actavo.com

### Santry

Turnapin Lane, Old Swords Road,  
Cloghran, Co. Dublin, Ireland  
Tel: 01 901 8690  
dublin.hire@actavo.com



### Hire & Sales Solutions

Unit C, Cedar Court Office Park, Denby Dale Road, Calder Grove,  
Wakefield, West Yorkshire, WF4 3QZ  
Tel: +44 (0)1924 416000 | Fax: +44 (0)1924 366250  
Email: quoteme@actavo.com